

Printer	Carts	Full Name	Notes
300	?	Epson Stylus Color 300	
400	T050+T052	Epson Stylus Color 400	
440	T050+T052	Epson Stylus Color 440	
460	T050+T052	Epson Stylus Color 460	
480	T050+T052	Epson Stylus Color 480	T013+T014
500	T050+?	Epson Stylus Color 500	
580	T050+T052	Epson Stylus Color 580	T013+T014
600	T050+T052	Epson Stylus Color 600	
640	T050+T052	Epson Stylus Color 640	
660	T050+T052	Epson Stylus Color 660	
670	T050+T052	Epson Stylus Color 670	
680	T017+T018	Epson Stylus Color 680	
700	T050+T053	Epson Stylus Photo 700	
740	T051+T052	Epson Stylus Color 740	
750	T050+T053	Epson Stylus Photo 750	
760	T051+T052	Epson Stylus Color 760	
790	T007+T008	Epson Stylus Photo 790	
800	T051+T052	Epson Stylus Color 800	
810	T026+T027	Epson Stylus Photo 810	
830	T026+T027	Epson Stylus Photo 830	
850	T051+T052	Epson Stylus Color 850	
860	T051+T052	Epson Stylus Color 860	
870	T007+T008	Epson Stylus Photo 870	
875	T007+T008	Epson Stylus Photo 875	
880	T019+T020	Epson Stylus Color 880	
890	T007+T008	Epson Stylus Photo 890	
895	T007+T008	Epson Stylus Photo 895	
900	T003+T005	Epson Stylus Color 900	
900	T007+T009	Epson Stylus Photo 900	
915	T007+T008	Epson Stylus Photo 915	
925	T026+T027	Epson Stylus Photo 925	
935	T026+T027	Epson Stylus Photo 935	
950	T0331-T0336	Epson Stylus Photo 950	
980	T003+T005	Epson Stylus Color 980	
1160	T051+T052	Epson Stylus Color 1160	
1200	?+T001	Epson Stylus Photo 1200	
1270	T007+T009	Epson Stylus Photo 1270	
1290	T007+T009	Epson Stylus Photo 1290	
1520	T051+T052	Epson Stylus Color 1520	
C20	T050+T052	Epson Stylus C20	T013+T014
C40	T050+T052	Epson Stylus C40	T013+T014
C42	T036+T037	Epson Stylus C42	
C44	T036+T037	Epson Stylus C44	
C46	T036+T037	Epson Stylus C46	
C48	T066+T067	Epson Stylus C48	
C60	T028+T029	Epson Stylus C60	
C62	T040+T041	Epson Stylus C62	
C64	T0441-T0444	Epson Stylus C64	
C66	T0441-T0444	Epson Stylus C66	
C70	T0321-T0324	Epson Stylus C70	
C80	T0321-T0324	Epson Stylus C80	
C82	T0321,T0422-T0424	Epson Stylus C82	

C84	T0441-T0444	Epson Stylus C84	
C86	T0441-T0444	Epson Stylus C86	
CX3200	T040+T041	Epson Stylus CX3200	
CX3600	T0441-T0444	Epson Stylus CX3600	
CX3650	T0441-T0444	Epson Stylus CX3650	
CX5200	T0321,T0422-T0424	Epson Stylus CX5200	
CX5400	T0321,T0422-T0424	Epson Stylus CX5400	
CX6400	T0441-T0444	Epson Stylus CX6400	
CX6600	T0441-T0444	Epson Stylus CX6600	
D68	T0611-T0614	Epson Stylus D68	
D78	T0711-T0714	Epson Stylus Photo D78	
D88	T0611-T0614	Epson Stylus D88	
DX3800	T0611-T0614	Epson Stylus DX3800	
DX3850	T0611-T0614	Epson Stylus DX3850	
DX4000	T0711-T0714	Epson Stylus Photo DX4000	
DX4050	T0711-T0714	Epson Stylus Photo DX4050	
DX4200	T0611-T0614	Epson Stylus DX4200	
DX4800	T0611-T0614	Epson Stylus DX4800	
DX4850	T0611-T0614	Epson Stylus DX4850	
DX5000	T0711-T0714	Epson Stylus Photo DX5000	
DX5050	T0711-T0714	Epson Stylus Photo DX5050	
DX6000	T0711-T0714	Epson Stylus Photo DX6000	
DX6050	T0711-T0714	Epson Stylus Photo DX6050	
PictureMate	T5570 6 pot	Epson PictureMate	
PictureMate	T573 4 pot	Epson PictureMate	
R1800	T0540-T0549	Epson Stylus Photo R1800	g,pb,c,m,y,r,mb,blu
R200	T0481-T0486	Epson Stylus Photo R200	
R220	T0481-T0486	Epson Stylus Photo R220	
R240	T0551-T0554	Epson Stylus Photo R240	
R2400	T0591-T0599	Epson Stylus Photo R2400	b,c,m,y,lc,lm,lb,mb,llb
R245	T0551-T0554	Epson Stylus Photo R245	
R265	T0801-T0806	Epson Stylus Photo R265	
R300	T0481-T0486	Epson Stylus Photo R300	
R320	T0481-T0486	Epson Stylus Photo R320	
R340	T0481-T0486	Epson Stylus Photo R340	
R360	T0801-T0806	Epson Stylus Photo R360	
R800	T0540-T0549	Epson Stylus Photo R800	g,pb,c,m,y,r,mb,b
RX420	T0551-T0554	Epson Stylus Photo RX420	
RX425	T0551-T0554	Epson Stylus Photo RX425	
RX500	T0481-T0486	Epson Stylus Photo RX500	
RX520	T0551-T0554	Epson Stylus Photo RX520	
RX560	T0801-T0806	Epson Stylus Photo RX560	
RX600	T0481-T0486	Epson Stylus Photo RX600	
RX620	T0481-T0486	Epson Stylus Photo RX620	
RX640	T0481-T0486	Epson Stylus Photo RX640	
RX700	T5591-T5596	Epson Stylus Photo RX700	
Scan2000	T051+T052	Epson Stylus Scan 2000	
Scan2500	T051+T052	Epson Stylus Scan 2500	